

## A-12 SolaxCloudアプリ ローカルアクセス (1/5)


通信環境がない状況でのスマートフォン操作の方法をお伝えします。

### ① サービスを選択



ホーム画面で  
サービスを選択

### ② ローカルアクセスを選択

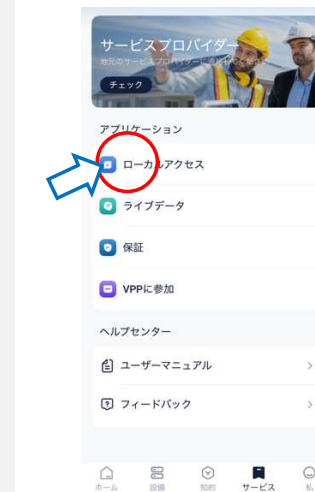

ローカルアクセス  
を選択

## A-3 SolaxCloudアプリ ローカルアクセス (2/5)

通信環境がない状況でのスマートフォン操作の方法をお伝えします。

※ ここで携帯のWi-Fiを充電器のWi-Fiに切り替える


③ 充電器の登録番号を入力



## A-3 SolaxCloudアプリ ローカルアクセス (3/5)

通信環境がない状況でのスマートフォン操作の方法をお伝えします。

### ④ カメラで機器のQRコードをスキャン

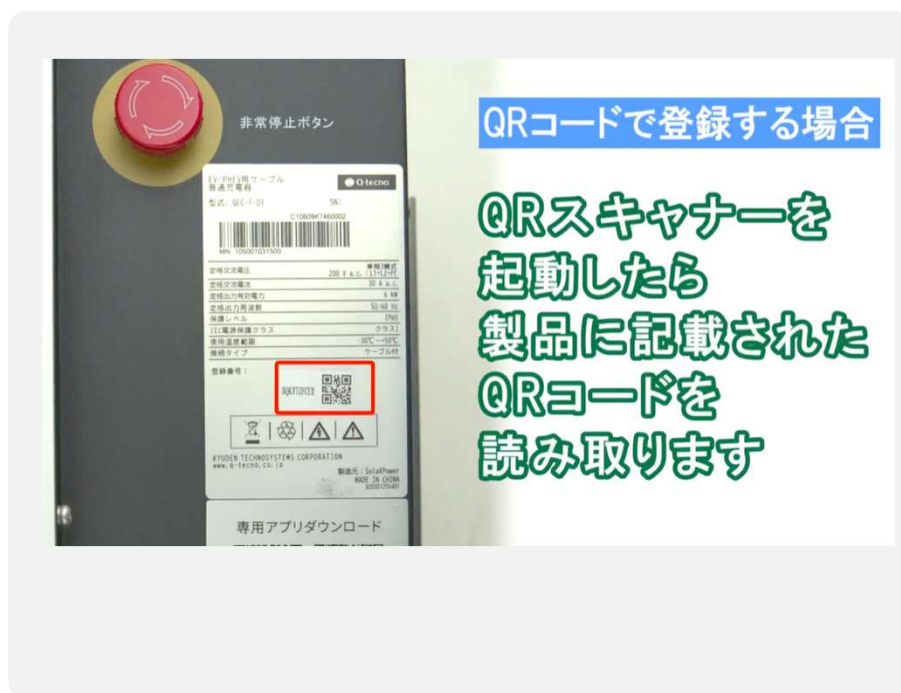

### ⑤ スキャン完了後ログイン・接続を選択



## A-3 SolaxCloudアプリ ローカルアクセス (4/5)

通信環境がない状況でのスマートフォン操作の方法をお伝えします。

### ⑥ ローカルアクセス完了



### A 最大電流変更



現在最大充電電力を選択



希望の電流Aを選択  
OKを選択

## A-3 SolaxCloudアプリ ローカルアクセス (5/5)

通信環境がない状況でのスマートフォン操作の方法をお伝えします。

### B 充電モードの切り替え


進行状況が完了したら完了をタップ



The image shows two screenshots from the SolaxCloud app. The left screenshot is the home screen, titled 'ローカル情報' (Local Information), displaying '0.0kWh' and '38%' with a 'START' button circled in red. The right screenshot is the '設定' (Settings) menu, with '充電器の設定' (Charger Settings) circled in red. A large orange arrow points from the home screen to the settings menu.

設定ボタン○を選択

充電器の設定を選択



The image shows the '充電器の設定' (Charger Settings) screen. The '起動モード' (Start Mode) is set to 'Plug&Charge', which is circled in red. A blue arrow points to this option.

起動モードから希望を選択

- ・デフォルトはPlug&Charge
- ・カード充電はRFID
- ・アプリ起動はAPP